Step 1 Jeep JK Bumper Hoop Install Instructions





Step by step on how to install the Jeep JK Bumper Hoop. Please read all steps carefully before starting the install.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts



Check that you have the bumper hoop and both frame reinforcement brackets before starting. Trial fit everything before painting or bedlining, and keep paint or liner off all threads.

Step 3 Included Hardware

Check that you have all of the hardware below before starting:

- 10x 5/16 button head bolts with flange nuts
- 2x 3/8 button head bolts

Tools needed: 3/16 allen wrench and a T50 torx bit.

Step 4 Remove Cover Plate



Using a T50 torx bit, remove the cover plate from the bumper, then remove the 4 U-nuts around the tow hook.

Step 5 Install Reinforcement Bracket



Loosely assemble each frame reinforcement bracket. The top piece faces inward and the lower piece goes with its shallow end toward the inside of the Jeep. Bolt the two pieces together with 2 of the 5/16 button heads and flange nuts.

Step 6 Bolt Bracket to Frame

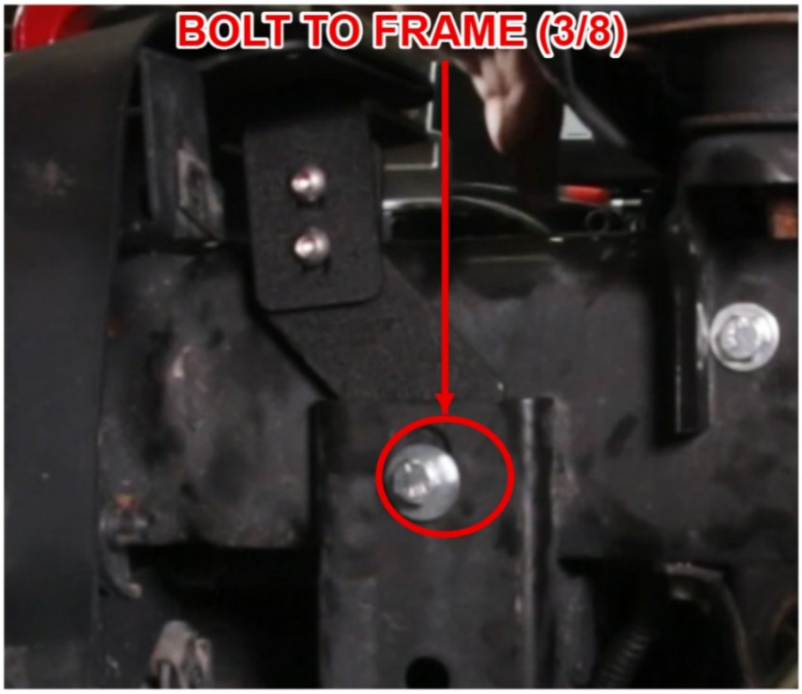

Set the reinforcement bracket into the pocket on the outside of the frame and bolt it down with a 3/8 button head bolt. Repeat on the other side.

Step 7 Reinstall Cover Plate



No winch: remove the 4 U-nuts from the outside of the cover plate, slide the cover plate between the reinforcement bracket and the bumper, and bolt it back down with the factory hardware.

Step 8 Bolt Hoop Down



Set the hoop in place and bolt it down with the remaining 5/16 button heads and flange nuts. Tighten all of the new hardware with a 3/16 allen wrench.

Step 9 Installation Complete



Confirm all hardware is tightened. Congrats! Your installation of the Jeep JK Bumper Hoop is now complete. Enjoy!