Step 1 Jeep JL Overhead MOLLE Panel Install Instructions






Step by step on how to install the Jeep JL Overhead MOLLE Panel. Please read all steps carefully before starting the install.

Installation Video: https://www.youtube.com/watch?v=oXTPSdSDiyo

Questions or Support:
Phone: 269-353-1184
Email: info@victory4x4.com

Step 2 Included Parts

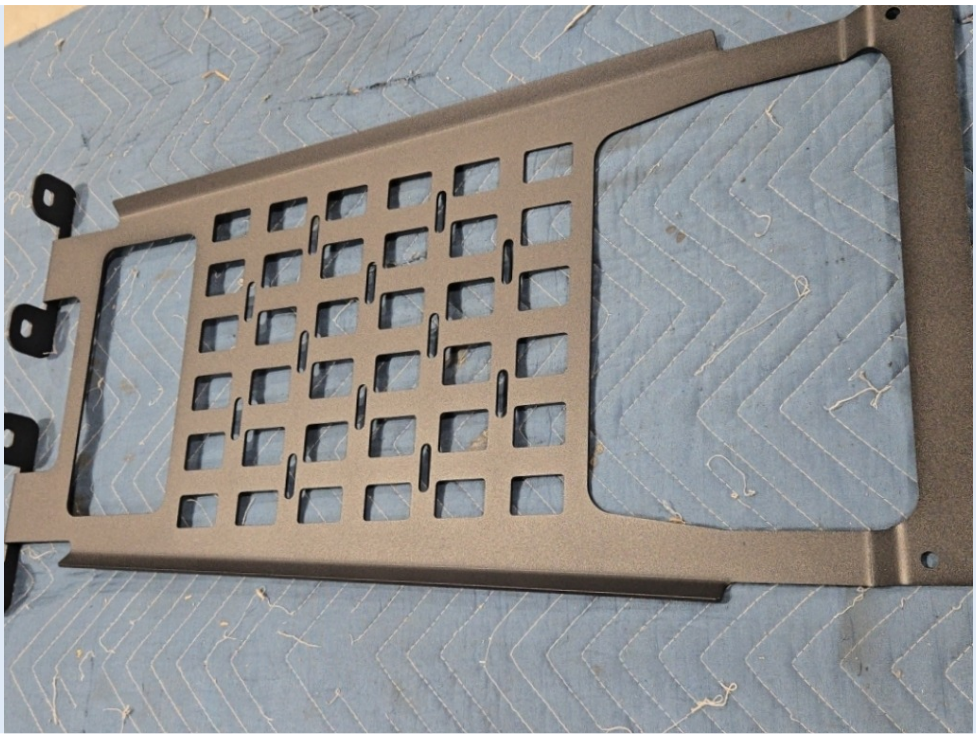

Check that you have all of the parts shown before starting.

Step 3 Included Hardware

046-0333 BOLT PACK

JLOMP-BP • Bill of materials (per 1 bag)

PIECES / BAG 18

BIN	QTY	PART #	DESCRIPTION
1	4 ×	040-0006	M8-1.25 x 25 BUTTON HD SOC CAP 18-8 SS
2	2 ×	040-0005	5/16-18 x 3/4 BUTTON HD SOC CAP 18-8 SS
3	2 ×	040-0020	5/16-18 SERR FLANGE NUT HARD ZNC
4	4 ×	040-0014	5/16 USS FLAT WASHER ZNC
5	6 ×	040-0138	5/16 (M8) MIL-SPEC FLAT WASHER 316 SS

Set bins out in this order • One bag at a time • Gold = zinc • Black = black finish

Odoo BOM link in description

Check that you have all of the hardware shown before starting. Hardware pack: 046-0333 (every bolt, nut and washer is listed in the bill of materials picture).

Step 4 Remove Freedom Panels





Remove the Freedom Panels. Then remove the 3 T-25 screws in the trim panel above the front seats and pull the panel down (metal clips, it pops off). Unplug the dome light and set the panel aside.

Step 5 Remove Latch Brackets



Use a T-40 Torx to remove the two rear Freedom Panel latch brackets.

Step 6 Lower Center Trim





Pop the rear of the center trim panel (above the windshield) down. Pull down and back so the clips release. It does not need to come out fully, just low enough to give room to drill two holes.

Step 7 Position MOLLE Panel






Put the MOLLE panel in place (the sides bend up). Set the front on top for now and bolt the rear in behind the Freedom Panel brackets with the stock hardware. Without a hardtop, use the supplied metric button head bolts and washers.

Step 8 Center Panel



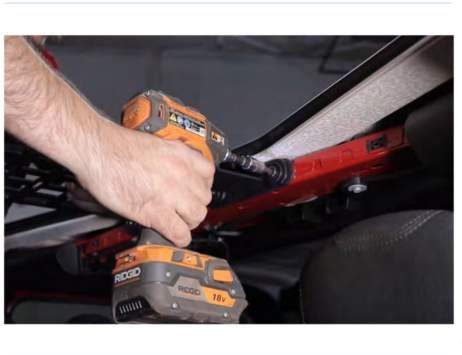

Center the panel and tighten the rear bolts so it is held securely while you mark the front holes.

Step 9 Mark and Drill Holes





Mark the two front holes with a center punch. Drill them with a smaller pilot bit, then step up to a 3/8" bit for the final size.

Step 10 Bolt Front Down



Vacuum up the metal shavings, then bolt the front of the panel down with the standard button heads and flange nuts (3/16 Allen).


Step 11 Reinstall Trim





Snap the front trim panel back in place and reinstall the rear trim panel. Plug the dome light back in and reinstall the 3 T-25 Torx screws.

Step 12 Bestop Sunrider Note

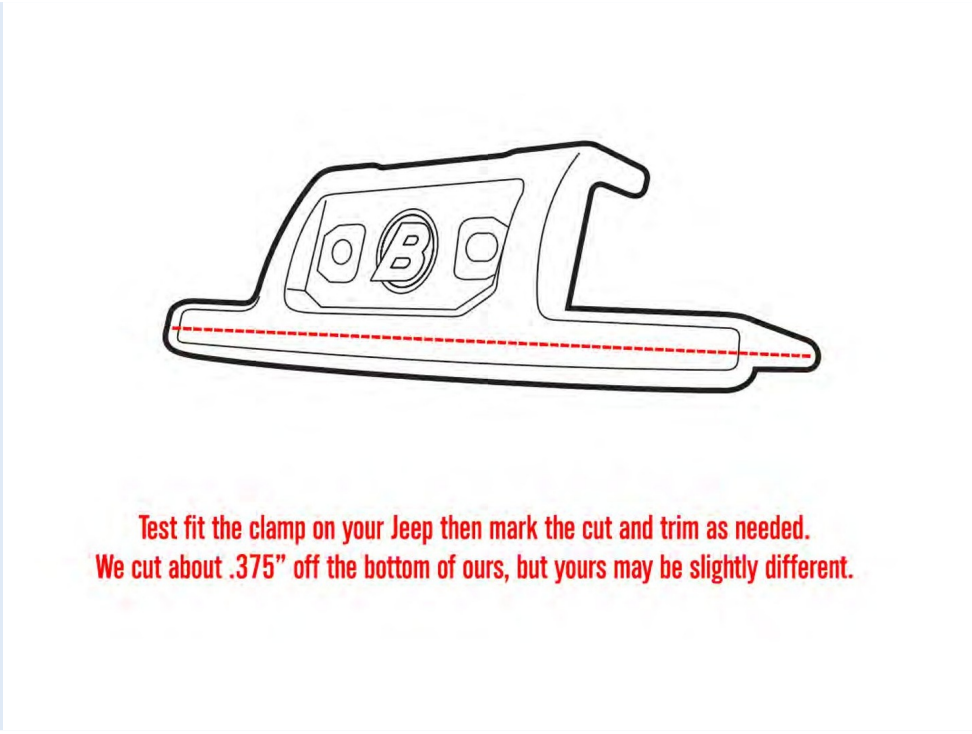

Bestop Sunrider with hardtop: trim or sand the bottom of the Bestop Rear Clamp (#573.01) along the dotted line so it fits between the rear Freedom Panel brackets and the MOLLE top (about 3/8" off). Push the brackets up as high as possible before bolting them down.

Step 13 Installation Complete



Reinstall your Freedom Panels (or leave them off).
Confirm all hardware is tightened. Congrats! Your installation of the Jeep JL Overhead MOLLE Panel is now complete. Enjoy!