Step 1 Jeep JK Classic Rock Sliders Install Instructions





Step by step on how to install the Jeep JK Classic Rock Sliders. Please read all steps carefully before starting the install.

Installation Video: https://www.youtube.com/watch?v=mpBwM0NmlXk

Questions or Support:
Phone: 269-353-1184
Email: info@victory4x4.com

Step 2 Included Parts



Check that you have all of the parts shown before starting.

Step 3 Tools Needed



Jeep JK Classic rock sliders (2 or 4 door). Tools: 10 mm, 13 mm and 18 mm sockets, 1/2 wrench, 3/16 allen and an optional 3/8 drill bit. Hardware: twelve 5/16 x 5/8 button heads and twelve 5/16 flange nuts. Trial install before painting or finishing.

Step 4 Remove Rubicon Rails





If equipped, remove the factory Rubicon rails. Take out the 6 bolts that come through the back of the pinch seam with a 10 mm socket, then the 3 bolts holding the rails to the bottom of the tub with a 13 mm socket. You can sell the old rails to fund your next Jeep project.

Step 5 Remove Body Mount Bolts





With the rails off, use an 18 mm socket to remove the 3 body mount bolts on a 4 door, or 2 on a 2 door. You may need a little pressure to free them from the body.

Step 6 Position Slider





With help from a friend, position the slider and loosely install the outer body mounts. On a 4 door, do not install the middle body mount bolt yet.

Step 7 Install Pinch Seam Bolts





On a 4 door, hold the slider against the pinch seam and install the six button head bolts and nuts. On a 2 door, install four per side. Some pinch seam holes may need to be opened with a 3/8 drill bit.

Step 8 Tighten Bolts





Once all the bolts are in place, tighten them with a 3/16 allen and a 1/2 wrench.

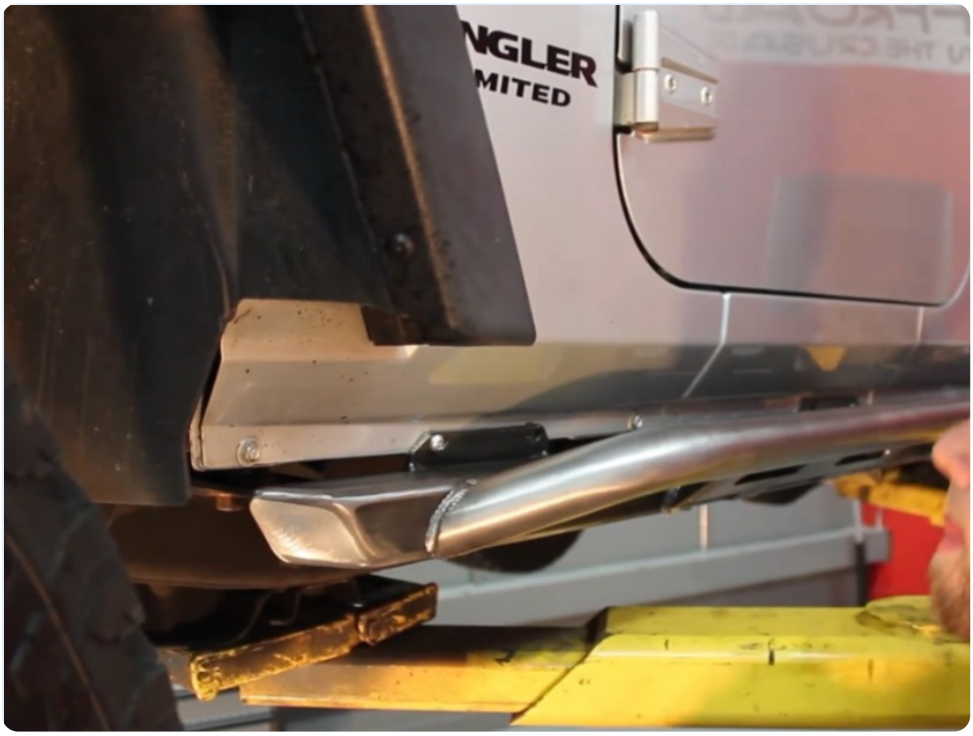Step 9 Install Middle Body Mount



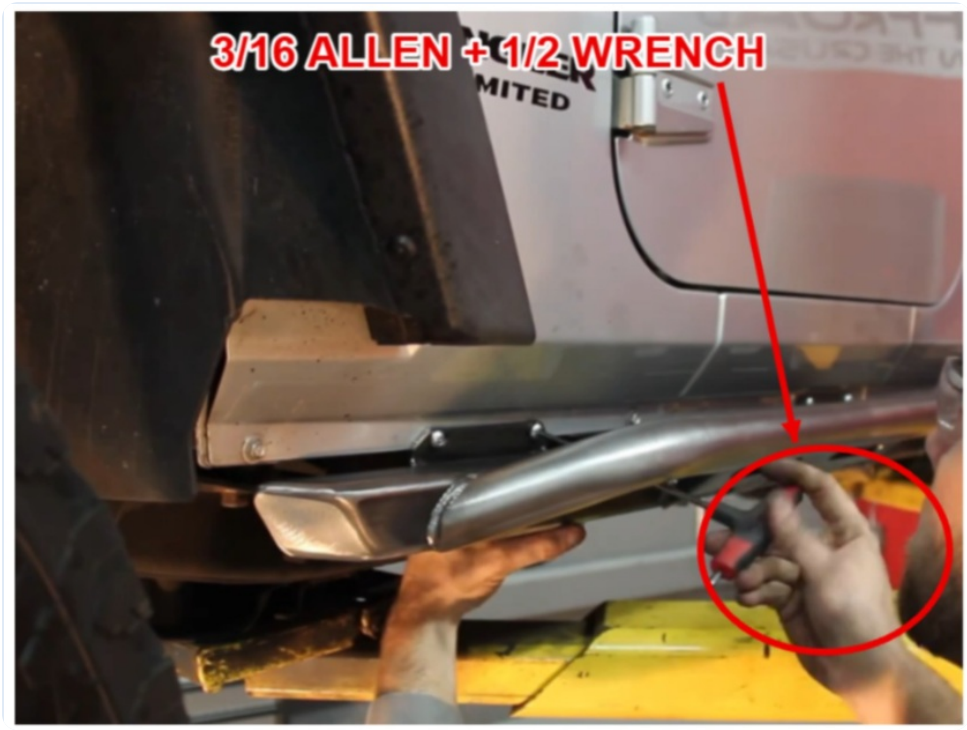

On a 4 door, install the middle body mount bolt now, then go back through and tighten anything you missed.

Step 10 Installation Complete



Confirm all hardware is tightened. Congrats! Your installation of the Jeep JK Classic Rock Sliders is now complete. Enjoy!