Step 1 Bronco Fog Light Brackets Install Instructions



Step by step on how to install the Fog Light Brackets on the 6th Gen Ford Bronco MOD Steel Bumper.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts

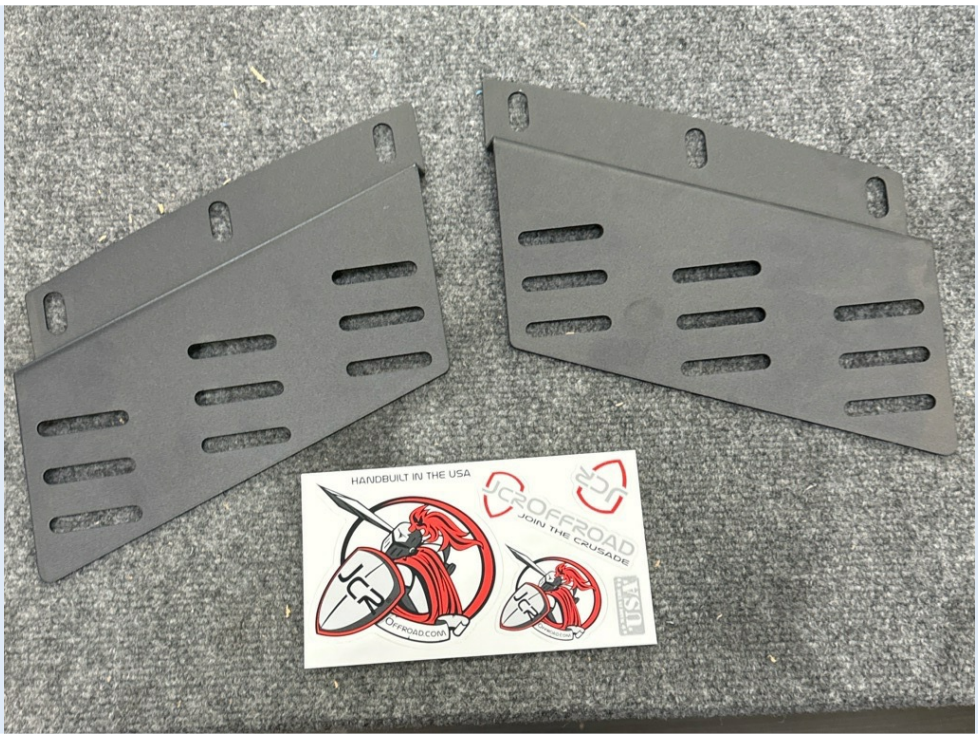

Check that you have all of the parts shown before starting.

Step 3 Remove Bumper Bolts



You will need the left and right fog light brackets. Remove the three bolts in the top of each of the wing cutouts.

Step 4 Mount Brackets



Use those bolts to mount each bracket as shown. Install the brackets so the light mounting slots are parallel to the front face of the bumper.

Step 5 Final Check



That’s it! Make sure all of your bolts are tight and enjoy your new Fog Light Brackets! Be sure to check out jcroffroad.com for even more Bronco products.

Step 6 Installation Complete



Confirm all hardware is tightened. Congrats! Your installation of the Bronco Fog Light Brackets is now complete. Enjoy!