
Step 1 License Plate Flip Install Instructions




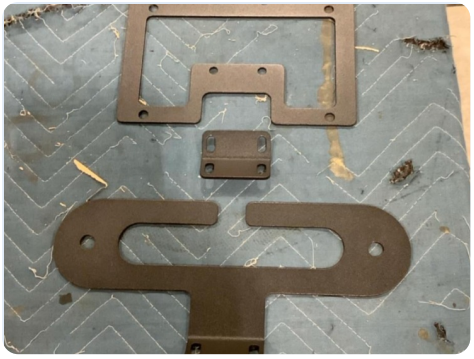

Step by step on how to install the Victory 4x4 Fairlead Mounted Front License Plate Flip.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Hardware Check

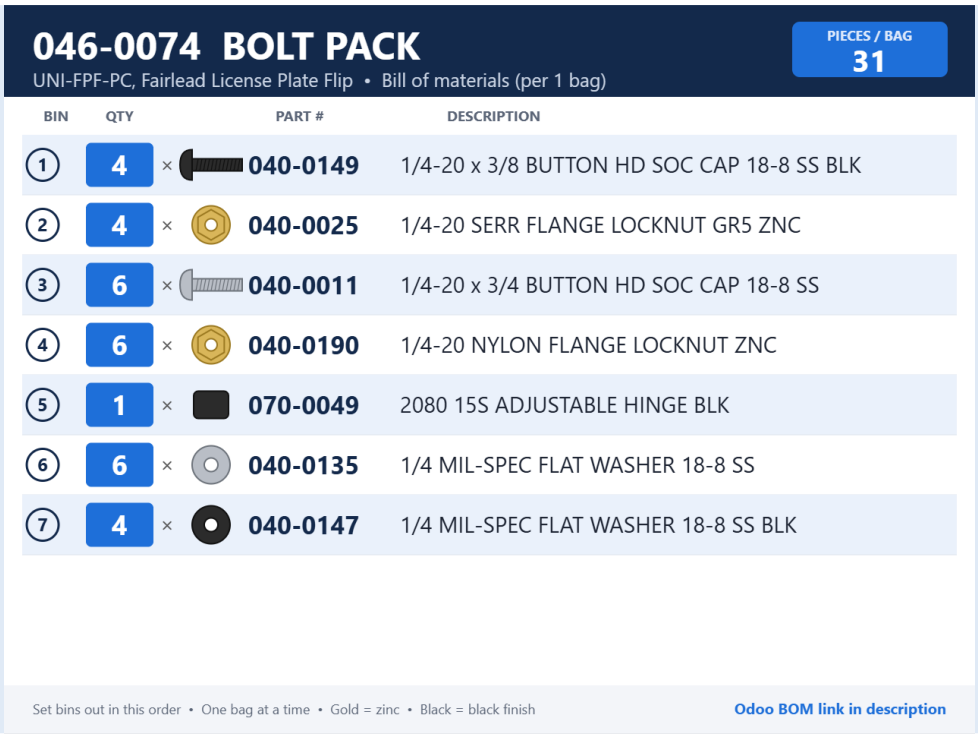


Double check you have all of the hardware shown before starting.

Hardware (046-0074):


- 4x 1/4"-20 x 3/8" button head bolts (black)
- 4x 1/4"-20 serrated flange locknuts
- 6x 1/4"-20 x 3/4" button head bolts
- 6x 1/4"-20 nylon flange locknuts
- 1x 2080 adjustable hinge (black)
- 6x 1/4" flat washers (stainless)
- 4x 1/4" flat washers (black)

Step 3 Included Parts

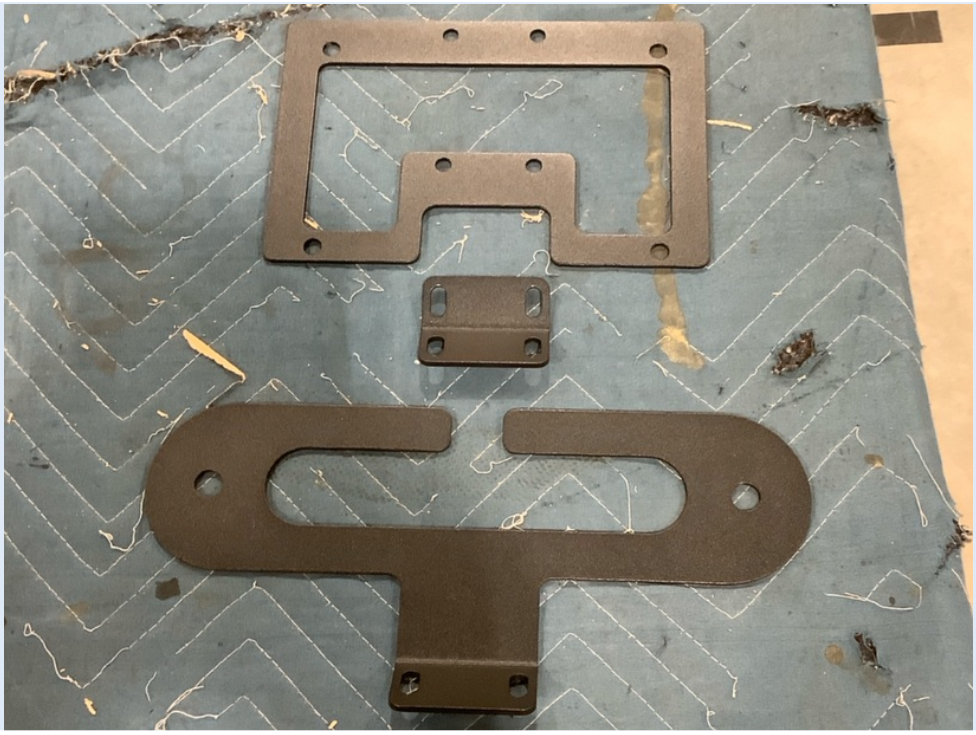

Check that you have all of the parts shown before starting.


Step 4 Assemble and Mount Behind Fairlead

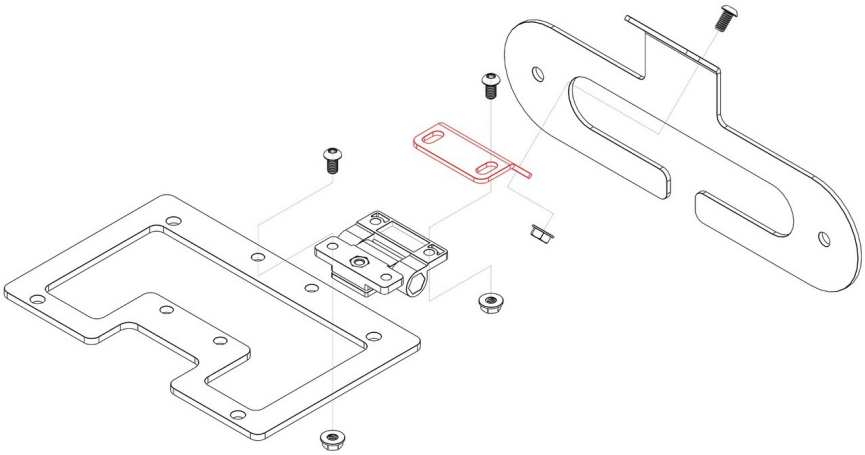



Bolt the brackets together as shown. The small angled red bracket is only used on bumpers with completely vertical fairleads. With an angled fairlead, the hinge bolts directly to the fairlead-side bracket. Slide it over the winch line and bolt it behind the fairlead. The hinge uses 5/16 inch bolts and lock nuts.

Step 5 Adjust the Plate Position

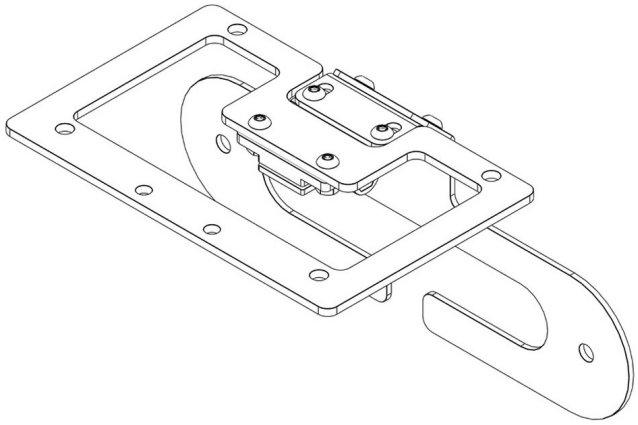



The plate can be flipped to mount higher. The slotted brackets allow front-to-back adjustment.

Step 6 Final Check



That’s it! Make sure all of your bolts are tight and enjoy your new Fairlead Mounted License Plate Flip!

Step 7 Installation Complete



Confirm all hardware is tightened. Congrats! Your installation of the License Plate Flip is now complete. Enjoy!