INST: UNI-LCS-PA4-PC

Scan To Edit

1



Included Parts:

2

Part	Description	Qty/Parent
040-0284	Black Phenolic Plastic Knob, 5/16"-18 T	4.00000000
040-0285	18-8 Stainless Steel Square-Neck Carri	4.00000000
040-0286	5/16" Self-Retaining Washer, 0.470" ID,	4.00000000
040-0025	1/4"-20 Thread Size, Medium-Strength	6.00000000
040-0051	1/4"-20 x 1/2" Button Head Black Stainl	6.00000000
040-0147	Black-Oxide 18-8 Stainless Steel Mil. S	6.00000000
040-0020	5/16-18 SERR FLANGE NUT HARD &	8.00000000
040-0200	18-8 Stainless Steel SAE Washer	8.00000000
040-0223	18-8 Stainless Steel Button Head Hex	8.00000000

Included Hardware:

3

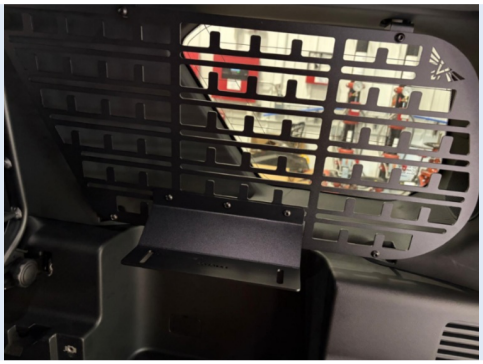

Loosely install the mounts to the molle panels using the provided 1/4″ hardware. Adjust the mounts until they are in the desired position and then tighten them fully into place.

4



Loosely assemble the shelf using the provided 5/16″ button head bolts, washers and nuts. Leave it loose for the moment so it can be adjusted in the vehicle.

INST: UNI-LCS-PA4-PC

5



Place the shelf on the mounts and adjust it until the slots in it line up with the slots in the mounts as desired.

6



Insert the 5/16" carriage bolt through the slots in the shelf and mount with a retaining washer on each, between the shelf and mount. Then, thread the knobs onto the bottom of each.

7 Adjust the position and size of the shelf until it is in the desired position. Then, tighten the bolts in the shelf to lock in the size and tighten the knobs to lock in the position. With that, the install is complete.

8

Thank you for supporting American-made. We hope you enjoy your new product!

If you have any questions or concerns please reach out to us.

info@jcroffroad.com
info@victory4x4.com
info@squatch-proof.com
info@fatamericanmfg.com

269-353-1184