Step 1 XJ Upper Shelf Install Instructions





Step by step on how to install the XJ Upper Shelf. Please read all steps carefully before starting the install.

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts



Check that you have all of the parts shown before starting.

Step 3 Included Hardware

046-0103 BOLT PACK

VUPRS-BP • Bill of materials (per 1 bag)

PIECES / BAG 66

BIN	QTY	PART #	DESCRIPTION
1	14	040-0025	1/4-20 SERR FLANGE LOCKNUT GR5 ZNC
2	14	040-0051	1/4-20 x 1/2 BUTTON HD SOC CAP 18-8 SS BLK
3	4	040-0137	M6-1.0 x 25 BUTTON HD SOC CAP 18-8 SS
4	18	040-0147	1/4 MIL-SPEC FLAT WASHER 18-8 SS BLK
5	4	040-0148	1/4-20 x 3/4 BUTTON HD SOC CAP 18-8 SS BLK
6	4	040-0188	M6-1.0 x 35 SOC HD CAP SCREW 18-8 SS
7	4	040-0203	#12 SNAP-IN NYLON NUT
8	4	040-0135	1/4 MIL-SPEC FLAT WASHER 18-8 SS

Set bins out in this order • One bag at a time • Gold = zinc • Black = black finish

Odoo BOM link in description

Check that you have all of the hardware shown before starting.

Step 4 Install Mounts

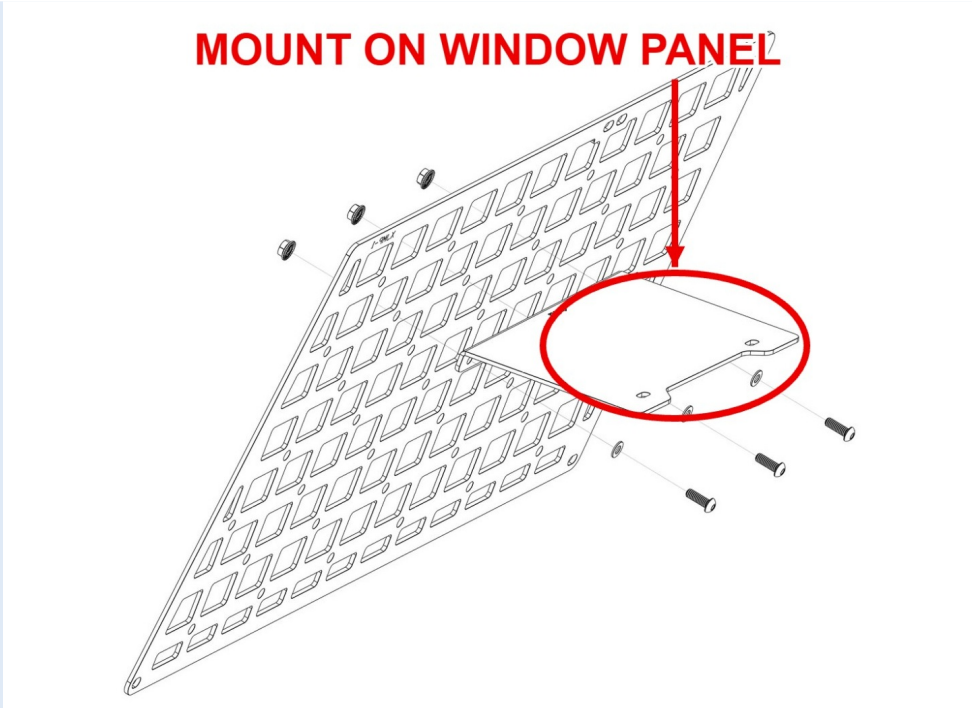

Install the mounts on the Rear Window MOLLE Panels with three 1/4-20 x 3/4 button heads, washers, and serrated flange nuts per mount. Use the second row of holes from the top, and the second, third, and fourth holes from the trunk of the vehicle.

Step 5 Attach Front Panel

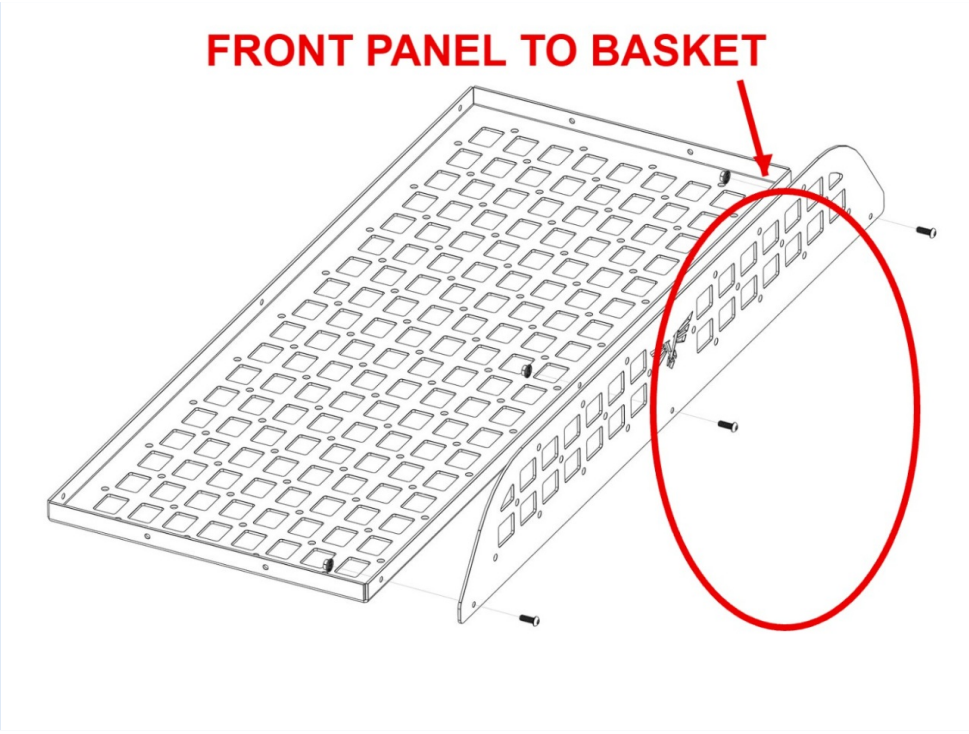

Attach the front panel to the basket with three 1/4-20 x 3/4 button heads, washers, and serrated flange nuts.

Step 6 Mount Basket

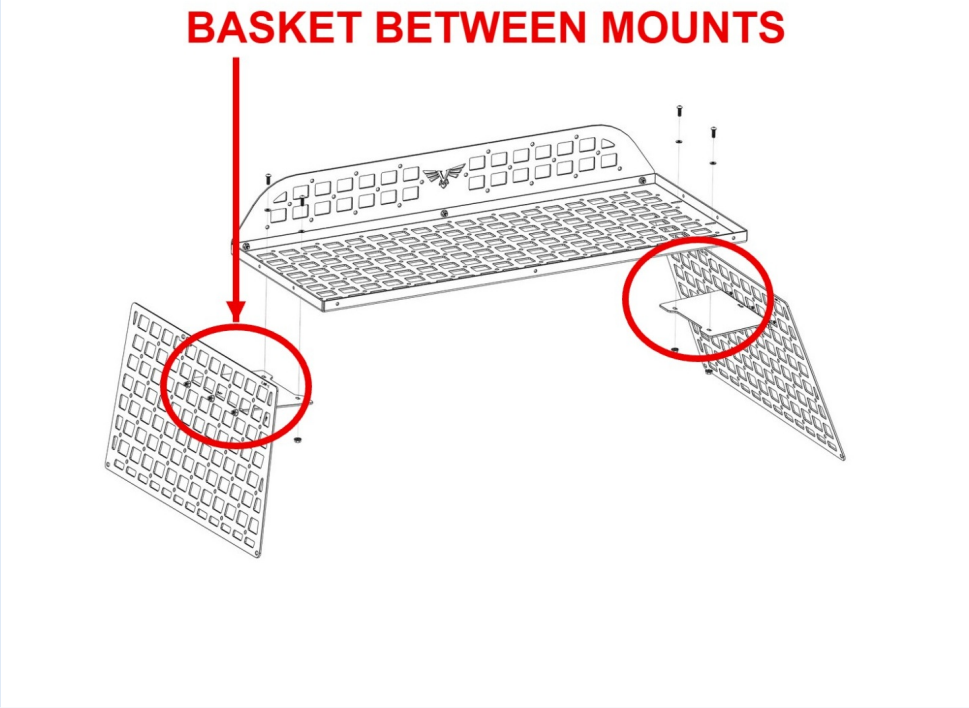

Raise the basket up between the two mounts and attach them together with two button heads, washers, and flange nuts per side. Tighten everything fully.

Step 7 Installation Complete



Confirm all hardware is tightened. Congrats! Your installation of the XJ Upper Shelf is now complete. Enjoy!