Step 1 ACC Relocation Bracket Install Instructions

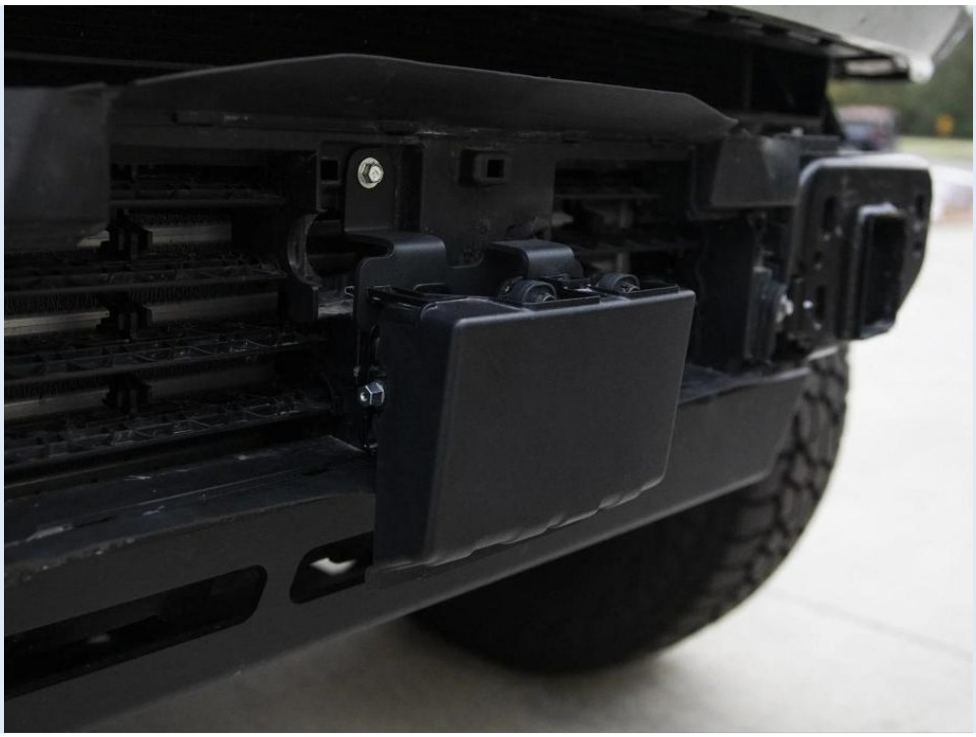

Step by step on how to install the Ford Bronco (2021+) ACC Relocation Bracket for the Front Vanguard Bumper. Please read all steps carefully before starting the install. Tools needed: 8mm socket and wrench, pry tool or flat head screwdriver and a 5/32" hex.

Installation Video: https://www.youtube.com/watch?v=rovj0rSfG_0

Questions or Support:
Phone: 269-353-1184
Email: info@jcroffroad.com

Step 2 Included Parts & Hardware

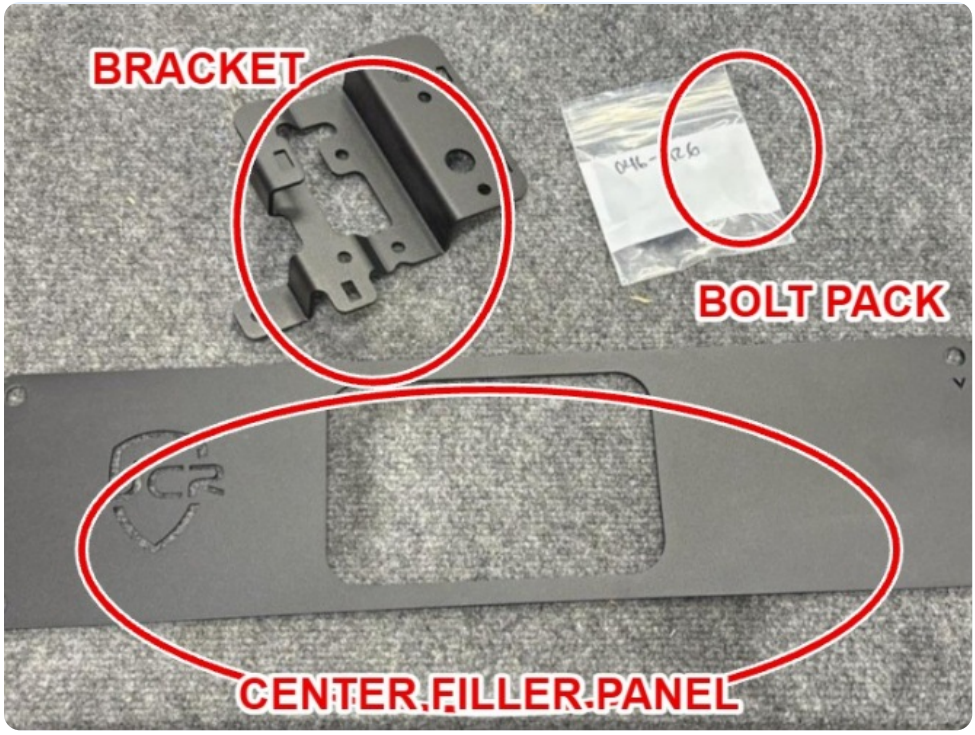

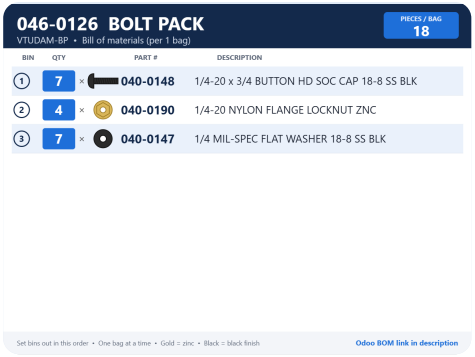

Check that you have all of the parts and hardware shown before starting. Hardware pack: 046-0126 (every bolt, nut and washer is listed in the bill of materials picture): 7x 1/4"-20 x 3/4" button head bolts, 4x 1/4"-20 nylon flange locknuts and 7x 1/4" flat washers.

Step 3 Remove the ACC Cover and Bolts



With the bumper removed from the vehicle, pop the plastic cover off the ACC module by pulling out on the top corners to release the clips and pivoting it back. Remove the three exposed L-shaped bolts with an 8mm socket.

Video timestamp: 0:17

Step 4 Remove the Factory Bracket





Pop the wire harness out of the bracket by pressing the thumb tab. Remove the bracket, then remove the four corner bolts with an 8mm socket (wrench on the top ones).

Video timestamp: 0:48

Step 5 Remove the Harness Clips



Lift the assembly up and flip it around, then remove the four plastic clips holding the wire harness. A pry tool or flathead screwdriver helps.

Video timestamp: 1:21

Step 6 Re-clip the Harness



Clip the harness back in one spot over from the original, in only three places, leaving slack at the end for the relocation bracket.

Video timestamp: 1:45

Step 7 Reinstall the Assembly



With the slack hanging out the front, place the assembly back in its original spot and reinstall the four factory bolts.

Video timestamp: 2:09

Step 8 Install the Relocation Bracket



Route the harness slack through the center cutout in the bracket. Line the bracket up with the factory center holes and loosely reinstall the factory 8mm bolts.

Video timestamp: 2:26

Step 9 Plug In the ACC Module

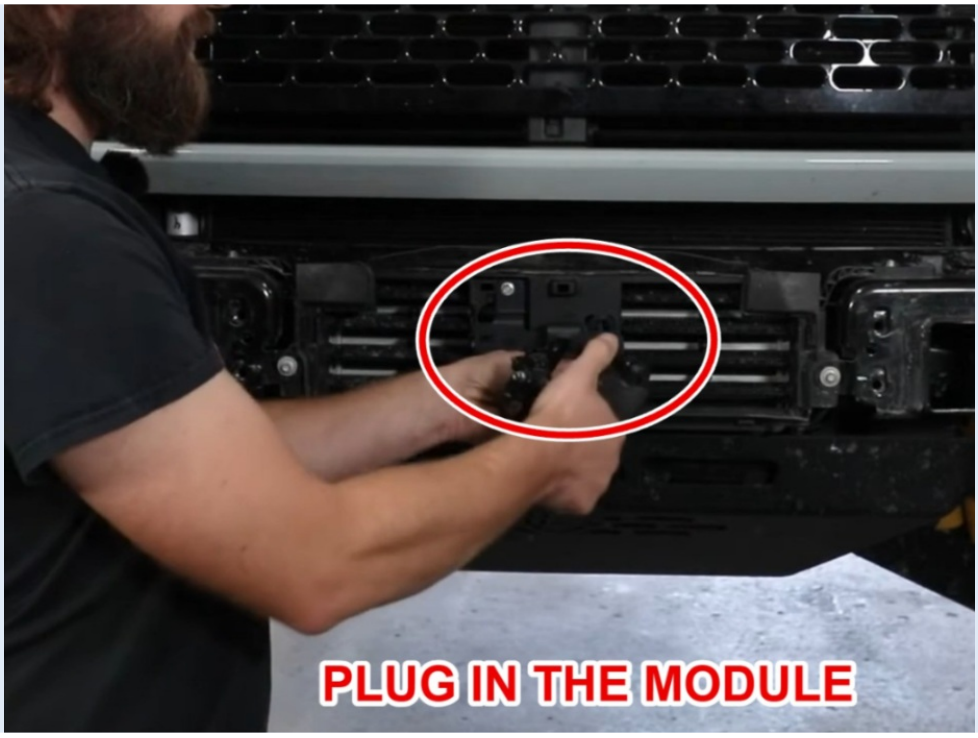

With the bracket loose in place, plug the factory module back into the harness hanging through our bracket.

Video timestamp: 2:54

Step 10 Mount the ACC Module



Loosely install the module to the relocation bracket through the three hole cutouts with the 1/4"-20 button head bolts, washers and nylon flange locknuts. Start them all by hand, then tighten with a 5/32" hex.

Video timestamp: 3:00

Step 11 Reinstall the Cover

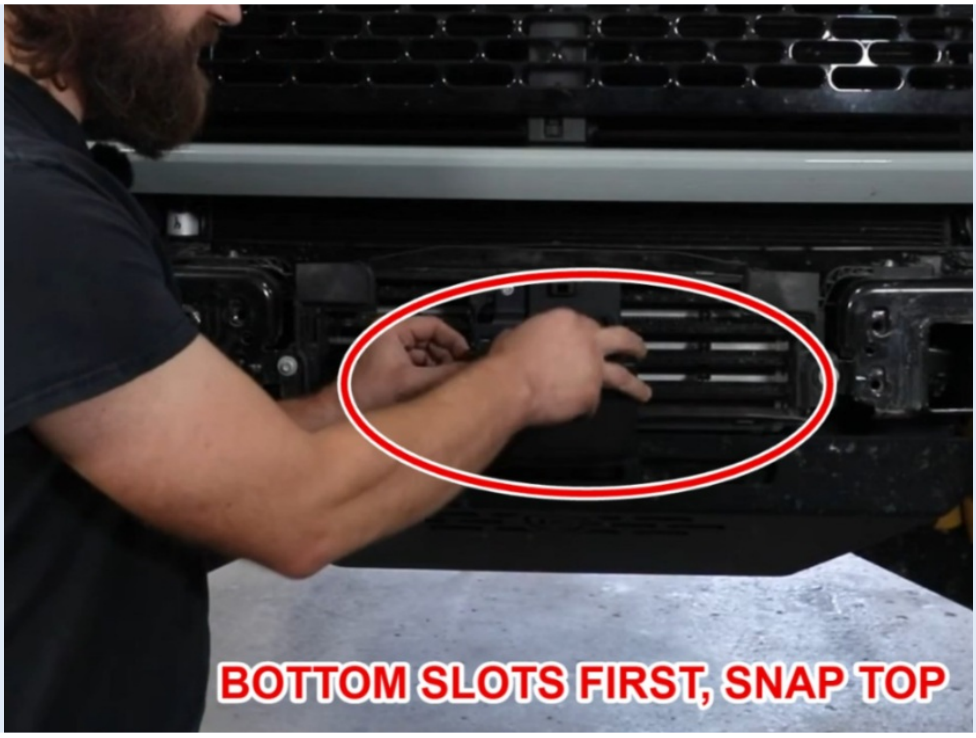

Snap the plastic cover back on by sliding it into the bottom slots first, then snapping the top once aligned.

Video timestamp: 3:25

Step 12 Final Check



Make sure your bumper has the correct center filler panel with the ACC cutout so the module works properly. That's it! Make sure all of your bolts are tight and enjoy your new ACC Relocation Bracket! Be sure to check out jcroffroad.com for even more Ford Bronco products.

Video timestamp: 3:33

Step 13 Installation Complete

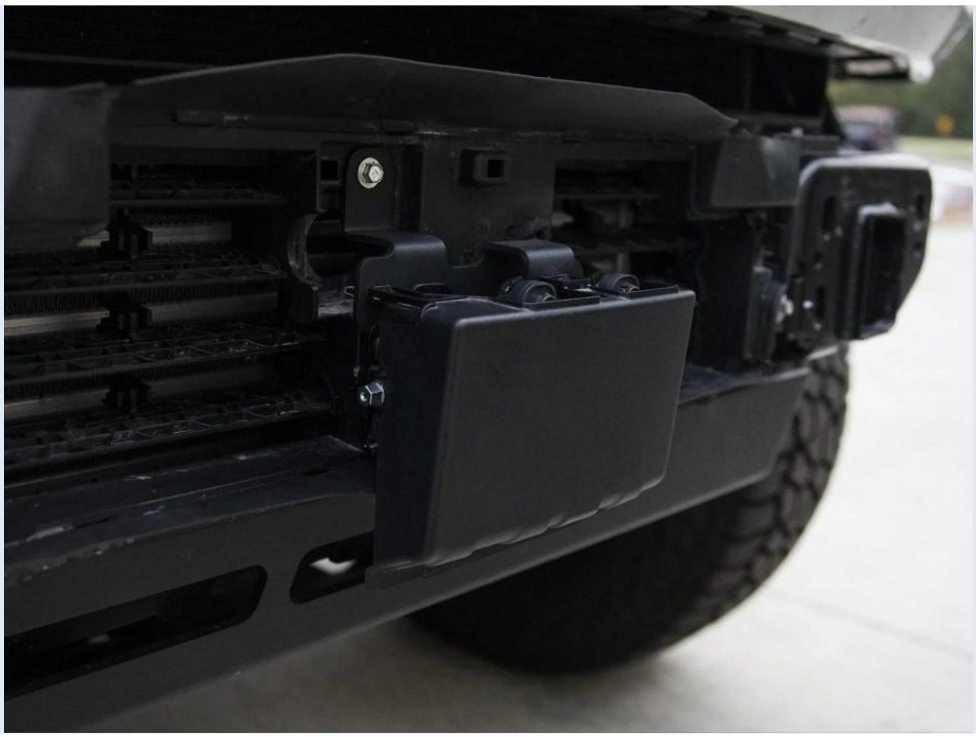

Confirm all hardware is tightened. Congrats! Your installation of the ACC Relocation Bracket is now complete. Enjoy!