Step 1 100 Series Strike Rear Bumper Install Instructions



Step by step on how to install the 100 Series Strike Rear Bumper. Please read all steps carefully before starting the install.

Installation Video: https://www.youtube.com/watch?v=53jbNSKWCyI

Questions or Support:
Phone: 269-353-1184
Email: info@victory4x4.com

Step 2 Remove Bumper Plastic



Remove the factory rear bumper plastic: a few screws in each wheel well and 4 or 5 on the bottom rear of the bumper. Pull the wings out to the side at the wheel well to pop the last clips, then remove the bumper. Tools: 13, 19, 22mm and 9/16 sockets, 3/16 Allen.

Step 3 Remove Hitch and Step



Remove the factory hitch if you have one. Also remove the factory step plate on top of the rear crossmember (it may be rusted away).

Step 4 Prep Bumper

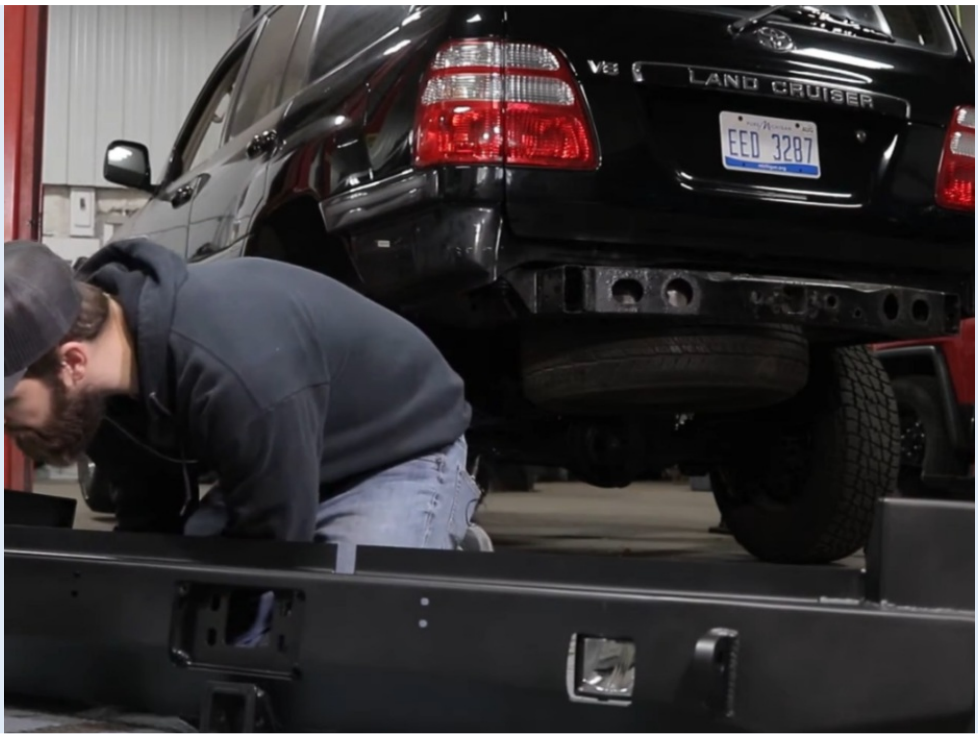

With the frame clear, prep the bumper. Install your cube lights, and the Adventure Carrier latch brackets if using them. The brackets can go on after the bumper is mounted, but the cube lights must go in beforehand.

Step 5 Lift Bumper



With a friend's help, lift the bumper onto the vehicle.

Step 6 Start Lower Bolt



Start one lower frame bolt (M14) and washer by hand to hold the bumper, then start the rest of the lower frame bolts and washers by hand.

Step 7 Start Side Bolts



Start the two side frame bolts (M8) on each side by hand.

Step 8 Start Rear Bolts



Start the four rear bolts (M12) loosely. With everything loose, adjust the bumper left to right if needed, checking clearance with the tailgate. Once centered, tighten all those bolts.

Step 9 Install Wing Brackets



Install the wing support brackets: three M14 bolts and washers into the frame, and two bolts, washers and nuts into the bumper wing. Get all the bolts started loosely.

Step 10 Tighten Frame Bolts



Fully tighten the frame-side bolts. With the wing-side bolts still loose, check that the body gap is even and make any minor adjustments to the wings, then tighten them.

Step 11 Torque Bolts



With the bumper fully installed, torque the rear M12 bolts to 70 ft-lbs and the lower frame M14 bolts to 110 ft-lbs. The rest of the hardware just needs to be tight.

Step 12 Install Cover Plate



Install the cover plate using four button head bolts, tightening with a 3/16 Allen.

Step 13 Install Caps



No Adventure Carrier yet? Install the black plastic caps on the top and bottom of the spindle sleeves with a bead of RTV around the lip to keep water out. Installing a carrier? See its install document. That's it! Enjoy your new Strike Rear Bumper!

Step 14 Installation Complete



Confirm all hardware is tightened. Congrats! Your installation of the 100 Series Strike Rear Bumper is now complete. Enjoy!